Shuffle

The random title chooses can be activated with a click on the function button **Blue** within a playlist. A new press on the **Blue** button will end the shuffle function

Menu

The iPod menu can be shown on the iPod with a press on the **Menu** button.

In the menu you can move around by using the arrow buttons.

Menu up / Menu down

By pressing the **yellow** button, you can open the chosen point in the menu.

To leave a menu point, press the menu button one time.

Adjusting the AUX level

The volume is controlled from the volume buttons on the remote.

The BOSSCOM iPod dock offers in addition the possibility to control the output level on the B&O system, using the green and red buttons.

Connection of the BOSSCOM iPod dock.

First connect the dock with the AUX output of the B&O stereo. Then you connect the 3,5mm minijack plug to the docking station. If you are not sure which one that is the AUX output on the stereo, then check out the stereo manual.

At last you must connect the dock to a power outlet, by using the following Apple USB adapter and the power adapter. The Apple USB adapter can also without the power adapter, be used to synchronize the iPod with a computer.

www.bosscom.com

Beo4 and Beo5 / B&O are all trademarks belonging to Bang & Olufsen A/S. BOSSCOM has no connection to Bang & Olufsen A/S, and BOSSCOM recognises Bang & Olufsen A/S' trademark rights.
iPod trademark belongs to Apple Inc.

BOSSCOM

BOSSCOM iPod Dock

Control your iPod/ iPhone / Touch

With BEO4 or BEO5 remote control.

© BOSSCOM 2009.

Function Overview.

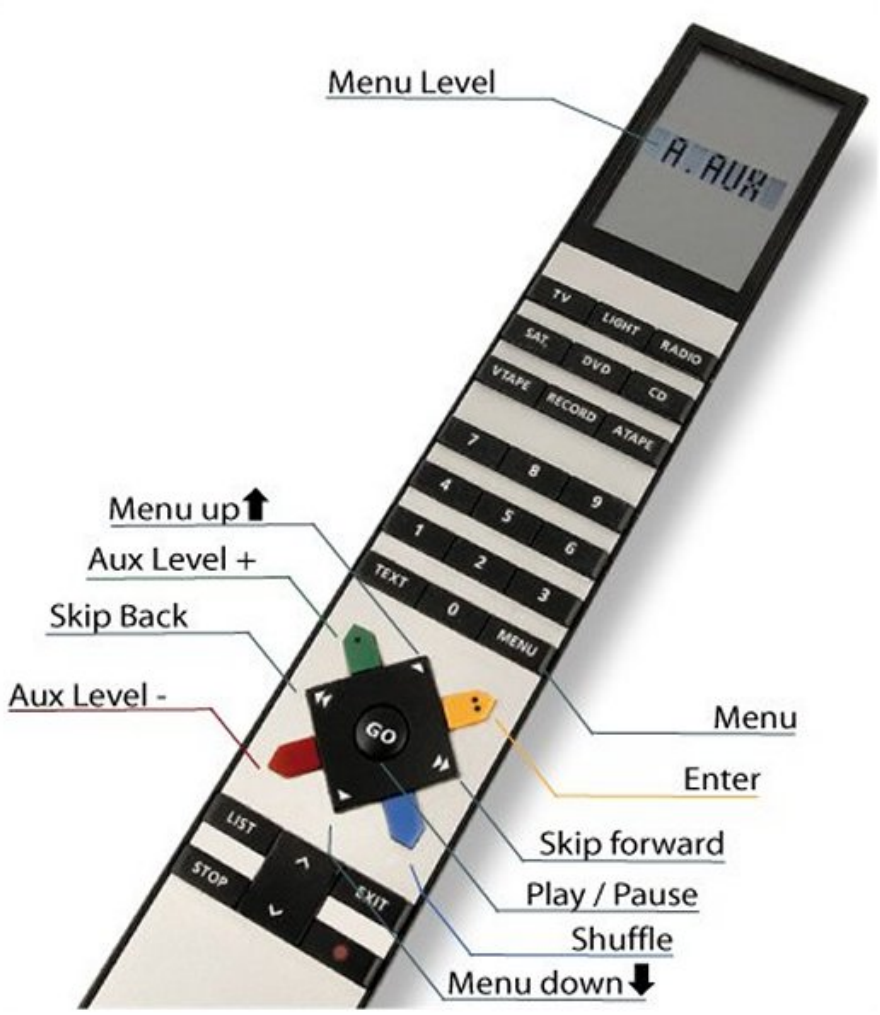

Functions of the BOSSCOM iPod dock:

The docking station supports following functions, which can be driven over the BEO4 / BEO5 remote control by Bang & Olufsen:

- Power On/ Off
- Play/ Pause
- Forward/ Rewind
- Titel forward/ Titel Back
- Adaptation Aux entrance
- Menu
- Menu up
- Menu down
- Enter
- Shuffle

BOSSCOM iPod dock Operations:

Place your iPod in the dockingstation. The iPod / docking station can now be controlled with the BEO4 / BEO5 remote control. The different operations in the iPod are controlled through the B&O remote like this:

Turn On / Turn Off:

Is done on **LIST** menu on the BEO4 / BEO5.

The point **A. AUX** will be written on the remote screen (should this text not in the menu screen occur, then please check the manual of BEO4 / BEO5 to find out how to go to this menu). Confirm now the menu point with **GO**.

And the iPod turns on itself.

To turn Off the iPod, then carry out the steps described above.

Play / Pause

Play/ Pause works through the **GO** button. When the iPod is in Play mode, a press on the **GO** button will turn the iPod into Pause mode and vice versa.

Titel forward / Titel Back

By use of the double arrow buttons you can move around within a playlist.

One press on **>>** makes you jump one title/song further. One press on **<<** starts the playing title/song from the beginning. Double press **<<** and you will jump one title/song back in the playlist.

Forward / Rewind

The fast forward and rewind function are also controlled by the double arrow buttons. Press **>>** and keep it down to fast forward. Press **<<** to fast rewind.

www.bosscom.com